

# Bifurcation using AUTO2000 and the Auto2000 Tellurium Plugin

*Continue with some bifurcation*

## 1.1 Introduction

The AUTO2000 plugin serves as a front-end for the AUTO2000 library, which is a library for continuation and bifurcation problems in ordinary differential equations <sup>1</sup>.

Current limitations: Multiple continuation parameters are not supported, i.e. only one parameter can be selected for any continuation problem.

Available properties in the auto2000 plugin are documented in the next section.

---

<sup>1</sup>AUTO2000 by Eusebius J. Doedel , Randy C. Paffenroth, Alan R. Champneys, Thomas F. Fairgrieve, Yuri A. Kuznetsov, Bart E. Oldeman, Björn Sandstede and Xianjun Wang. See <http://www.dam.brown.edu/people/sandsted/publications/auto2000.pdf>.

## 1.2 Plugin Properties

The AUTO library has numerous properties that have been wrapped and made available to a plugin client. Each property is listed below with its data type, default value and a short description. For the exact usage and a more in detail description please consult the main AUTO2000 manual.

Property Name	Data Type	Default Value	Description
SBML	string	N/A	SBML document as a string. Model to be used by AUTO
TempFolder	string	”.”	Folder used by auto and the plugin for saving temporary files
KeepTempFiles	bool	false	Boolean indicating if temporary files should be deleted after an AUTO session or not
ScanDirection	string	”Positive”	Parameter instructing AUTO how to sweep its principal continuation parameter
PrincipalContinuationParameter	string	N/A	The principal continuation parameter (PCP) is the first parameter that AUTO will sweep. Currently only one parameter is supported, which by default is the PCP

BifurcationPoints	vector<int>	N/A	This integer vector holds the exact point number (in the sequence of all output data) for an AUTO solution point. It can be used together with the labels in the bifurcationlabels property to assist in plotting a bifurcation diagram
BifurcationLabels	stringList	N/A	The string list holds the AUTO designated solution type label for a solution point, as found in the bifurcationpoints property. Consult the AUTO documentation for possible label types and their meaning
BifurcationData	telluriumData	N/A	The BifurcationData property holds the bifurcation diagram after a session. The first column contains the values of the selected parameter, and successive columns are selected species

The following properties are used internally by the auto library. Depending on the problem at hand, they may need to be tweaked.

---

fort2	string	N/A	Property containing the content of the AUTO temporary file, fort.2. Fort.2 is the input file for AUTO and created by the plugin
-------	--------	-----	---

fort3	string	N/A	Property containing the content of the AUTO temporary file, fort.3. The content of fort.3 file is undocumented in AUTO's documentation
fort6	string	N/A	Property containing the content of the AUTO temporary file, fort.6. The content of fort.6 file is a bifurcation session summary
fort7	string	N/A	Property containing the content of the AUTO temporary file, fort.7. The content of fort.7 file is a bifurcation diagram on success
fort8	string	N/A	Property containing the content of the AUTO temporary file, fort.8. The content of fort.8 file contain various statistics from the session
fort9	string	N/A	Property containing the content of the AUTO temporary file, fort.8. Diagnostic messages, convergence history, eigenvalues, and Floquet multipliers are written in fort.9
NDIM	int	1	The NDIM property correspond to the dimension of the system of equations
IPS	int	1	Constant defining the problem type

IRS	int	1	This constant sets the label of the solution where the computation is to be restarted.
ILP	int	1	Fold detection; 1=ON, 0=OFF
NICP	vector<int>	N/A	Property denoting the number of free parameters
ICP	int	N/A	Free parameters
NTST	int	15	The number of mesh intervals
NCOL	int	3	The number of collocation points per mesh interval
IAD	int	3	Mesh adaption every IAD steps; 0=OFF
ISP	int	1	Bifurcation detection; 0=OFF, 1=BP(FP), 3=BP(PO,BVP), 2=all
ISW	int	1	Branch switching: 1=normal, -1=switch branch (BP, HB, PD), 2=switch to two-parameter continuation (LP, BP, HB, TR) 3=switch to three-parameter continuation (BP)
IPLT	int	0	This constant allows redefinition of the principal solution measure, which is printed as the second (real) column in the fort.7 output-file. See AUTO manual for possible settings
NBC	int	0	Number of boundary conditions
NINT	int	0	Number of integral conditions

NMX	double	1000	Maximum number of steps
RL0	double	0.01	The lower bound on the principal continuation parameter
RL1	double	30	The upper bound on the principal continuation parameter
A0	double	0	The lower bound on the principal solution measure
A1	int	10000	The upper bound on the principal solution measure
NPR	int	50	Save the solution in the solution file every NPR continuation steps
MXBF	int	-1	Automatic branch switching for the first MXBF bifurcation points if IPS=0, 1
IID	int	0	Control diagnostic output; 0=none, 1=little, 2=normal, 4=extensive
ITMX	int	8,	Maximum number of iterations for locating special solutions/points
ITNW	int	5,	Maximum number of correction steps
NWTN	int	3,	Corrector uses full newton for NWTN steps
JAC	double	0,	User defines derivatives; 0=no, 1=yes
EPSL	double	1e-8	Property setting the convergence criterion for parameters

EPSU	double	1e-8	Property setting the convergence criterion for solution components
EPSS	double	1e-6	Property setting the convergence criterion for special points
DS	double	0.001	Session start step size
DSMIN	double	1e-5	Minimum continuation step size
DSMAX	double	0.1	Maximum continuation step size
IADS	int	1	Step size adaption every IADS steps; 0=OFF
NTHL	int	0	The number of modified parameter weights (for BVP)
THL	vector<int>	N/A	List of parameter weights
NTHU	int	0	The number of modified solution component weights (for BVP)
THU	vector<int>	N/A	List of solution weights
NUZR	int	0	The number of user output points specified
UZR	vector<int>	N/A	List of values for user defined output

---

Table 1.1: Plugin Properties

## 1.3 The `execute(bool inThread)` function

The `execute()` function will start a bifurcation session. Depending on the problem at hand, the algorithm may run for a long time.

The `execute(bool inThread)` method supports a boolean argument indicating if the execution of the plugin work will be done in a thread, or not. If set to false, i.e. executing `execute(false)`, the function will be a blocking function and will not return until the plugin work is done. If it is set to true, the `execute(true)` will return immediately and the plugin work will be executed in a thread. The user can use the `isPluginDone(plugin)` to query the status of the plugin progression.

The `inThread` argument defaults to **false**.

## 1.4 Plugin Events

The `auto2000` plugin uses all of the available plugin events, i.e. the `PluginStarted`, `PluginProgress` and the `PluginFinished` events.

The available data variables for each event are internally treated as *pass through* variables, so any data, for any of the events, assigned prior to the plugins `execute` function (in the `assignOn()` family of functions), can be retrieved *unmodified* in the corresponding event function.

Event	Arguments	Purpose and argument types
<code>PluginStarted</code>	<code>void*</code> , <code>void*</code>	Signal to application that the plugin has started. Both parameters are <i>pass through</i> parameters and are unused internally by the plugin.
<code>PluginProgress</code>	<code>void*</code> , <code>void*</code>	Communicating progress of fitting. Both parameters are <i>pass through</i> parameters and are unused internally by the plugin.
<code>PluginFinished</code>	<code>void*</code> , <code>void*</code>	Signals to application that execution of the plugin has finished. Both parameters are <i>pass through</i> parameters and are unused internally by the plugin.

Table 1.2: Plugin Events



## 1.5 Python example

The following Python script illustrates how the auto plugin can be invoked, how to set its properties and finally how to plot a bifurcation diagram.

```
1 from teplugins import *
2
3 try:
4     sbmlModel = "BIOMD0000000203.xml"
5     auto = Plugin("tel_auto2000")
6
7     #print auto.listOfPropertyNames()
8
9     #Setup Auto PropertyS
10    auto.setProperty("SBML", readAllText(sbmlModel))
11
12    #Auto specific properties
13    auto.setProperty("ScanDirection", "Positive")
14    auto.setProperty("PrincipalContinuationParameter", "A")
15    auto.setProperty("PCPLowerBound", 10)
16    auto.setProperty("PCPUpperBound", 200)
17
18    #Max numberof points
19    auto.setProperty("NMX", 5000)
20
21    #Execute the plugin
22    auto.execute()
23
24    # Bifurcation summary
25    print "Summary: " + auto.BifurcationSummary
26
27    #Plot Bifurcation diagram
28    pts = auto.BifurcationPoints
29    lbls = auto.BifurcationLabels
30    biData = auto.BifurcationData
31
32    biData.plotBifurcationDiagram(pts, lbls)
33
34    print "Done"
35
36 except Exception as e:
37    print "There was a problem: " + 'e'
```

Listing 1.1: Bifurcation example using a complex model.

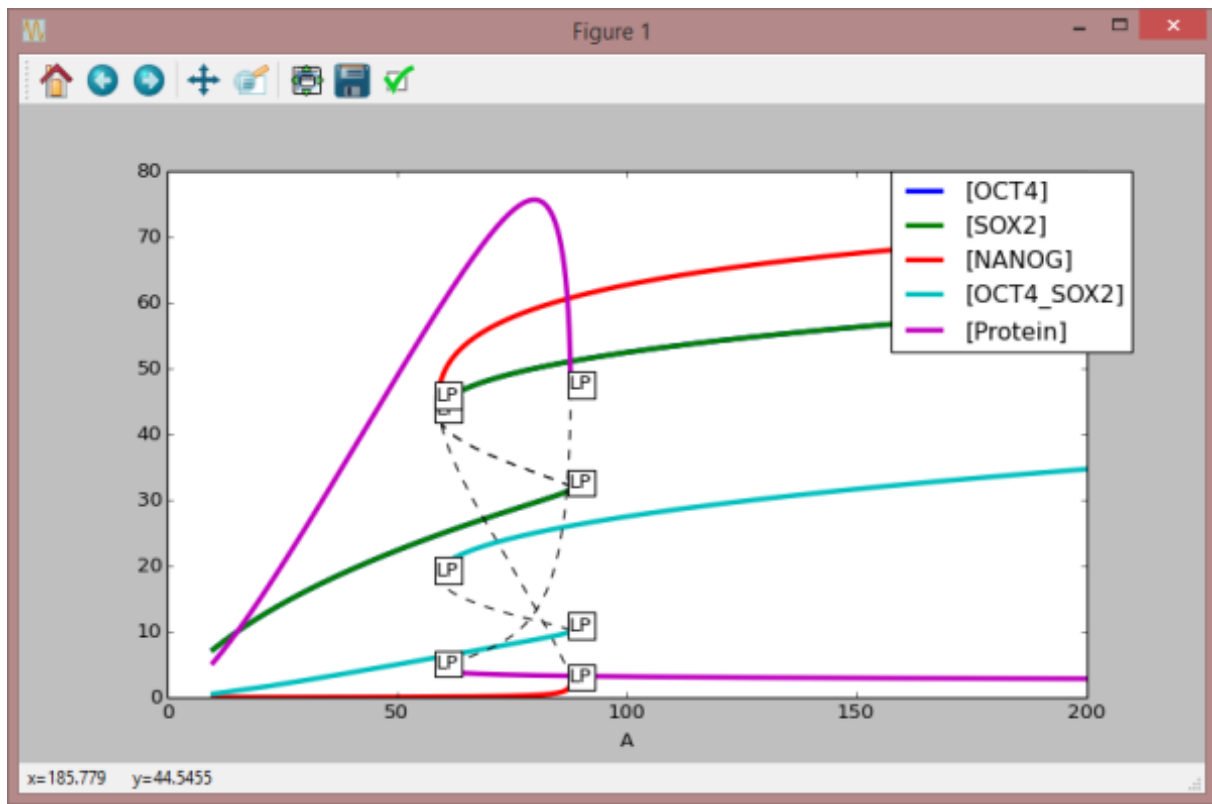


Figure 1.1: Output for the example script above.